



### PRESS ON/OFF

Memory of brightness.  
Every time switch on the lamp, the lighting brightness is the same as the previous setting.

ON  
Press time < 0.5s  
OFF

### PRESS STEPLESS DIMMER

100%  
Hold time < 0.5s  
5%

Information icons: 1. Hand pressing lamp button with checkmark. 2. Hand pressing lamp button with 'X' mark. 3. Hand pressing lamp button with checkmark. 4. Hand pressing lamp button with 'X' mark.

### CCT SWITCH

Information icons: 1. Hand pressing lamp button with checkmark. 2. Hand pressing lamp button with 'X' mark. 3. Hand pressing lamp button with checkmark. 4. Hand pressing lamp button with 'X' mark.

CCT MODE  
Hold Time > 4s  
OFF

CCT MODE  
BLUE LIGHT ON

2700K  
Press Time < 0.5s  
2200K

CCT MODE  
Hold Time > 4s  
OFF

If there is no operation within 10 seconds, the lamp will automatically quit from the colour temperature switching mode.

CCT MODE  
Auto Off Time > 10s  
OFF

TABLE LAMP IP65

CONNECTING CHARGING BASE IP20

### CHARGE

USB adapter DC5V 1A (optional)

USB Type-C


CHARGE MODE  
ORANGE LIGHT ON  
IN CHARGE

CHARGE MODE  
GREEN LIGHT ON  
FULL CHARGE



### INSTALLING REMOTE CONTROL BATTERIES

1. While pressing the release latch on the back of the remote control, lift the battery compartment cover off of the remote control.
2. Insert two AAA batteries into the battery compartment.  
Make sure that you match the + and – symbols on the batteries with the + and – symbols in the battery compartment.
3. Replace the battery compartment cover.

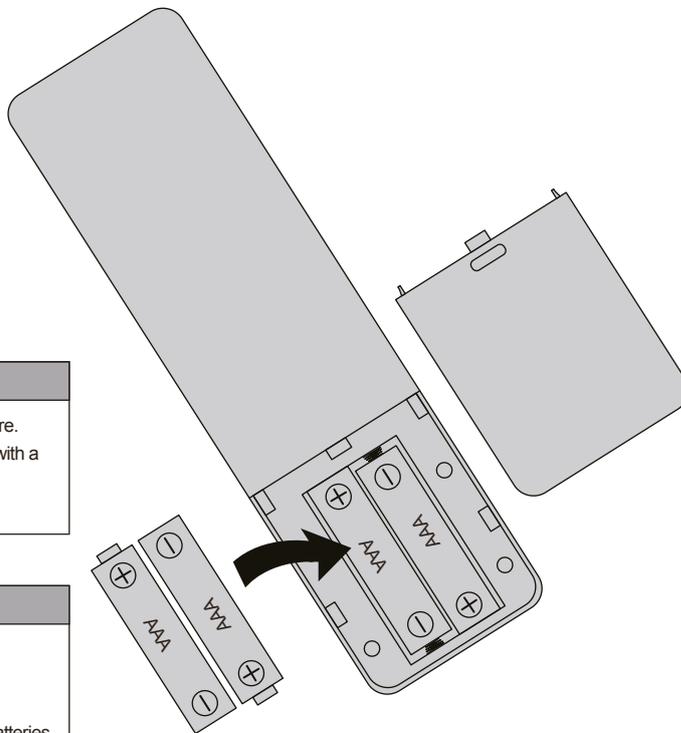

#### Cautions


- Batteries should not be exposed to excessive heat, such as sunshine, heat registers, or fire.
- Battery chemicals can cause a rash. If the batteries leak, clean the battery compartment with a cloth. If chemicals touch your skin, wash immediately.
- Make sure that batteries are disposed of correctly. Do not burn or incinerate.

#### Notes

- Do not mix batteries of different types.
- Do not mix old and new batteries.
- Remove batteries when the charge is depleted.
- If the remote control is not going to be used for an extended period of time, remove the batteries.


### REMOTE CONTROL

1. Remote control distance: ≤20 meters (open space)


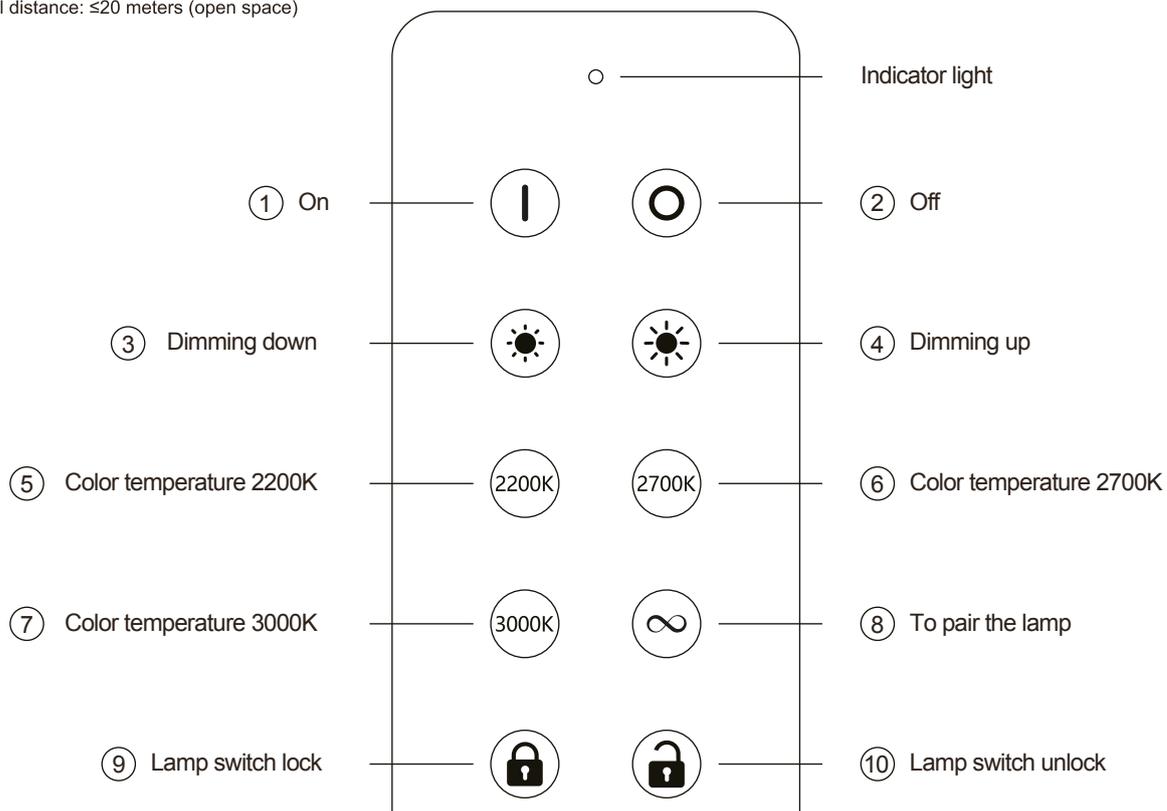




### LAMP SWITCH LOCK

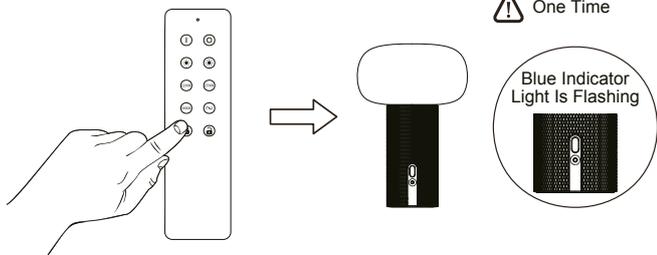





### LAMP SWITCH UNLOCK

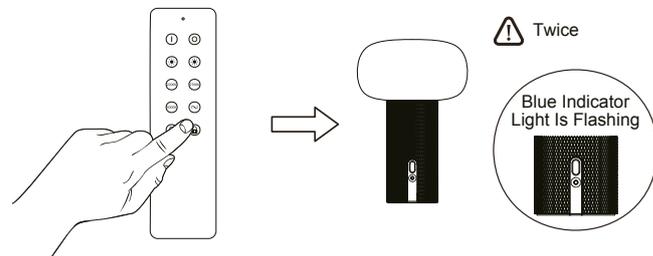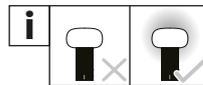

#### Tips

- When the lamp runs out of the battery, it automatically unlocks.
- When the remote control turns off the table lamp, it automatically unlocks.
- The table lamp automatically unlocks when it is charging.

### PAIRING THE LAMP

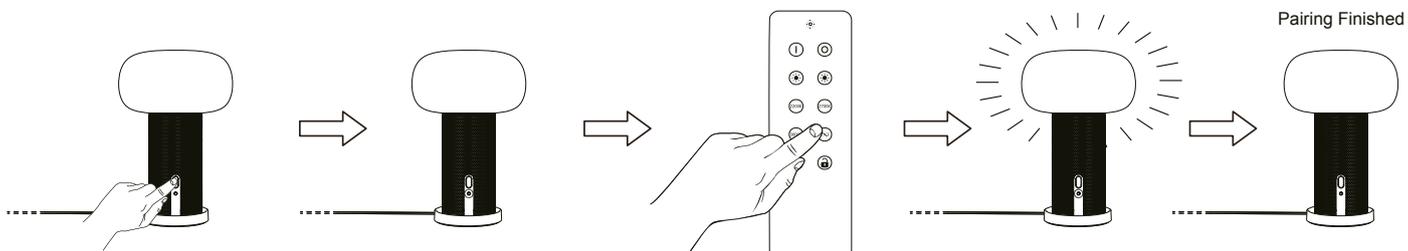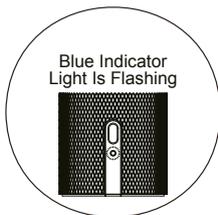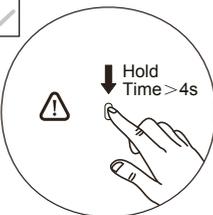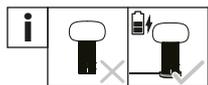

#### Step 1

- Hold the switch for 4 seconds until the blue indicator light begins to flash, then release it.





#### Step 2

- The blue indicator light is flashing, and the lamp is waiting to be paired.

#### Step 3

- Press the pairing button on the remote control and maintain pressure until the lamp has been successfully paired.
- Simultaneously, the indicator light on the remote control will flash green.

### UNPAIRING THE LAMP

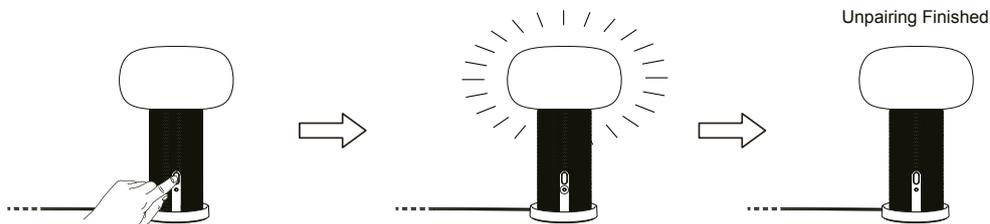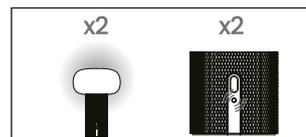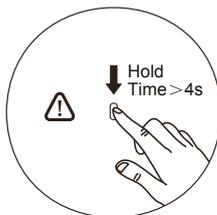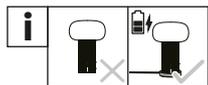

#### Step 1

- Hold the switch for 4 seconds until both the blue indicator light and the lamp flash twice simultaneously, indicating that the table lamp has been unpaired.