




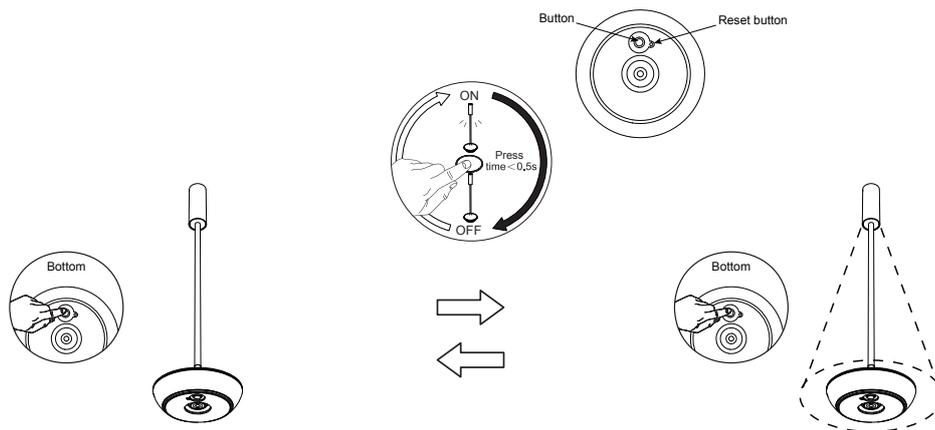


PRESS ON/OFF




Memory of brightness.
Every time switch on the lamp, the lighting brightness is the same as the previous setting.



 STEPLESS DIMMER

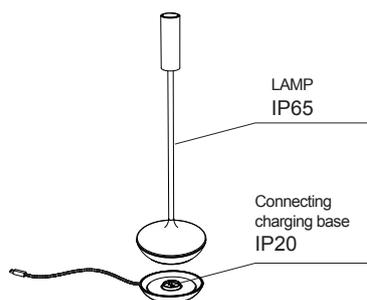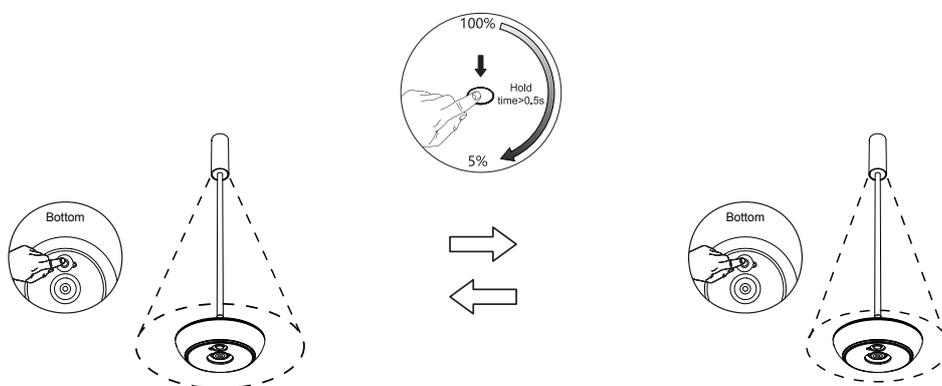


CHARGE

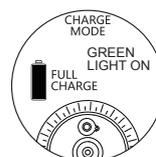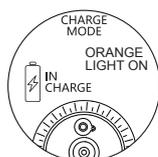 



INSTALLING REMOTE CONTROL BATTERIES

1. While pressing the release latch on the back of the remote control, lift the battery compartment cover off of the remote control.
2. Insert two AAA batteries into the battery compartment.
Make sure that you match the + and – symbols on the batteries with the + and – symbols in the battery compartment.
3. Replace the battery compartment cover.

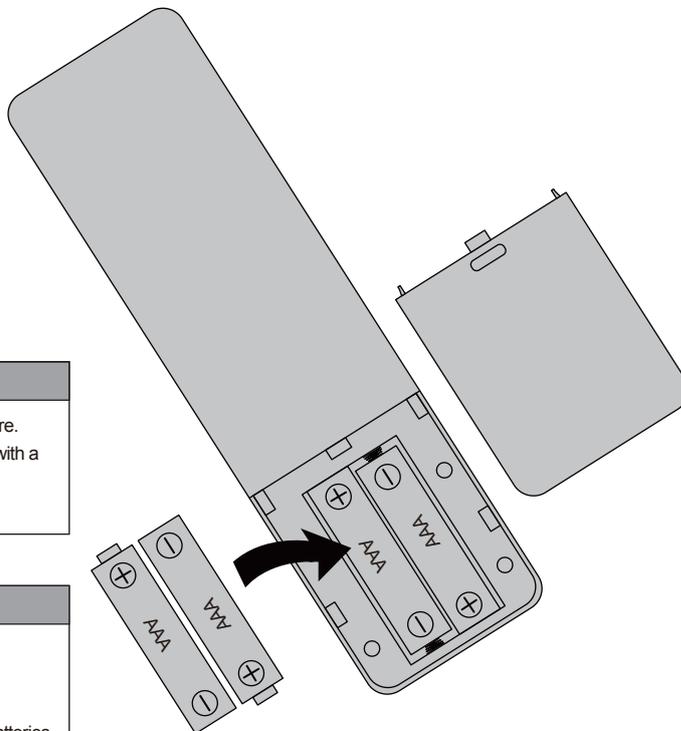

Cautions


- Batteries should not be exposed to excessive heat, such as sunshine, heat registers, or fire.
- Battery chemicals can cause a rash. If the batteries leak, clean the battery compartment with a cloth. If chemicals touch your skin, wash immediately.
- Make sure that batteries are disposed of correctly. Do not burn or incinerate.

Notes

- Do not mix batteries of different types.
- Do not mix old and new batteries.
- Remove batteries when the charge is depleted.
- If the remote control is not going to be used for an extended period of time, remove the batteries.


REMOTE CONTROL

1. Remote control distance: ≤20 meters (open space)


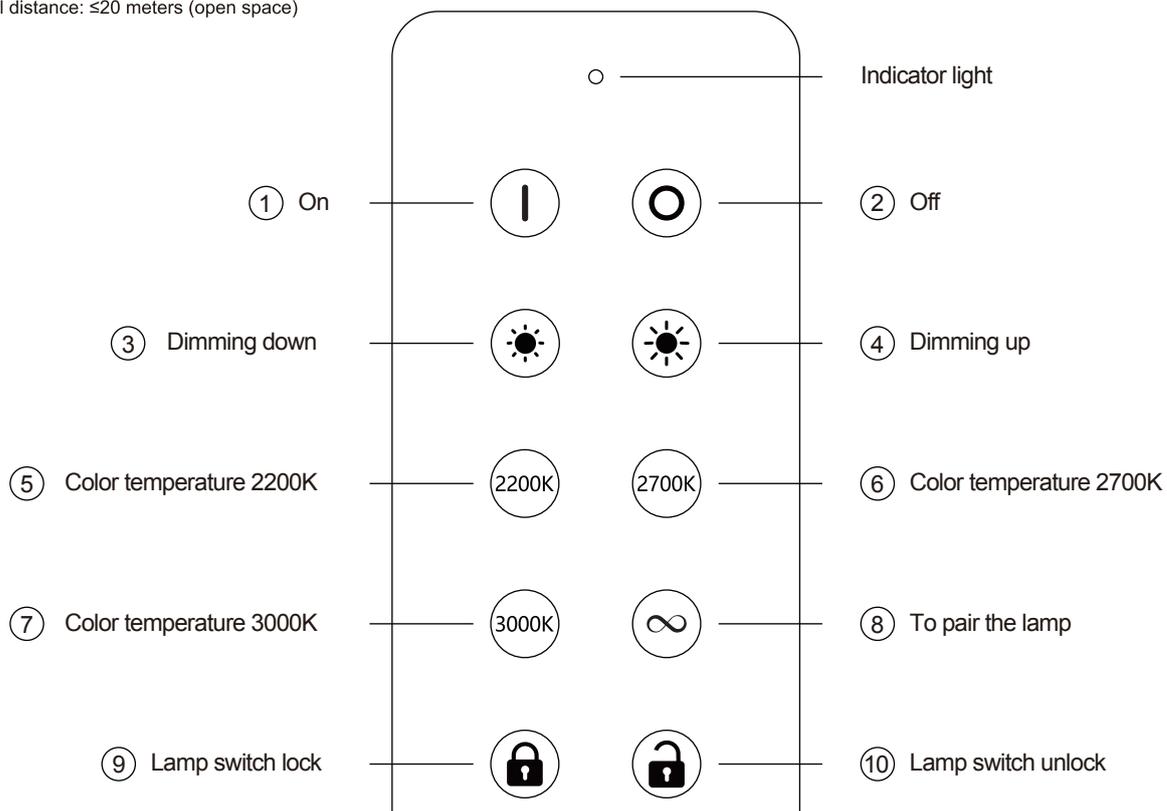




LAMP SWITCH LOCK

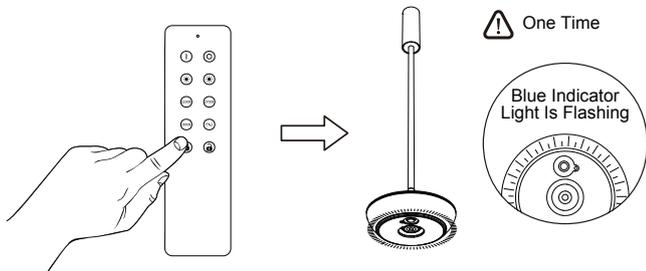




LAMP SWITCH UNLOCK

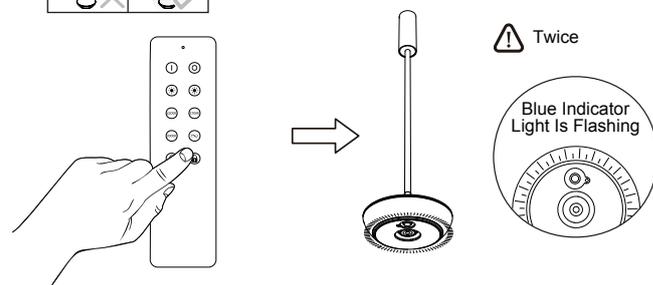 

Tips

- When the lamp runs out of the battery, it automatically unlocks.
- When the remote control turns off the table lamp, it automatically unlocks.
- The table lamp automatically unlocks when it is charging.

TO PAIR THE LAMP

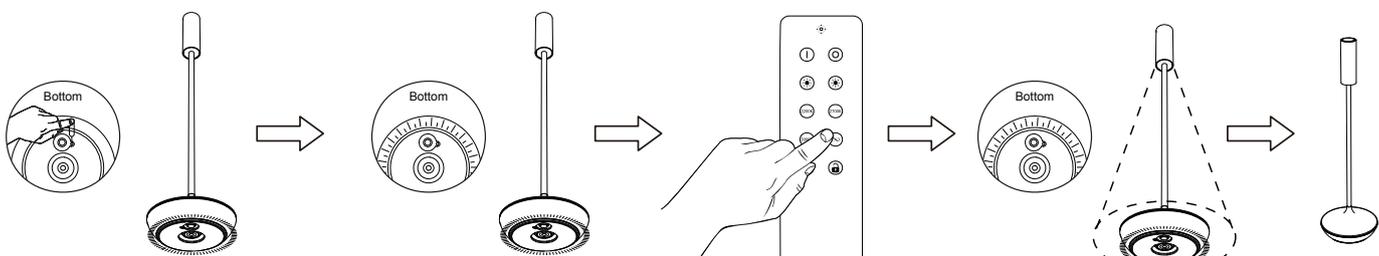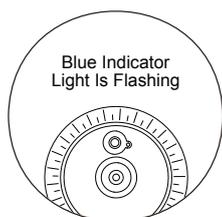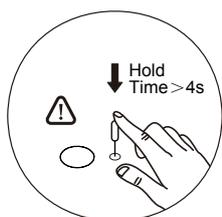

Pairing Finished

Step 1

- Using a card eject tool (a thin, long needle or other similar tool will work), press and hold the reset button for 4 seconds until the blue indicator light begins to flash, then release it.



Step 2

- The blue indicator flashes for 20s flashing, and the lamp is waiting to be paired.

Step 3

- Press the pairing button on the remote control and maintain pressure until the lamp has been successfully paired.
- Simultaneously, the indicator light on the remote control will flash green.

TO UNPAIR THE LAMP

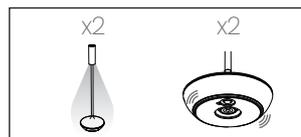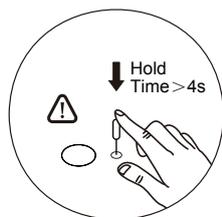

Unpairing Finished

Step 1

- Using a card eject tool (a thin, long needle or other similar tool will work), press and hold the reset button for 4s until both the blue indicator light and the lamp flash twice simultaneously, indicating that the table lamp has been unpaired.

